

Durimide® 7000

Photosensitive Polyimide Precursor

- Negative acting photosensitive material for processing on broadband or g-line exposure tools. Durimide 7000 has the following characteristics:

- Fast photospeed
- Good resolution
- Self priming
- Excellent adhesion

- Durimide 7000 has a high Tg making it suitable for applications with subsequent high temperature (>400°C) process steps.

- Cured film thickness range: 2-50µm

Type	Viscosity	Cured Film Thickness
Durimide® 7005	900CS	2-5µm
Durimide® 7020	5500CS	11-25+µm

Compatible Ancillary Products:

Developer/Rinse Combinations :	Back Side Rinse:
QZ3501/QZ3512	QZ3501
HTRD2/RER600	HTRD2

Edge Bead Remover :	Stripper Products:
HTRD2	N-Methyl 2-Pyrrolidone
	QZ 3322

Cured Film Properties of Durimide® 7000 Series


Tensile Strength	MPa	170
Young's Modulus	GPa	2.9
Tensile Elongation	%	73
Glass Transition Temperature	°C	> 350
Thermal Decomposition Temperature	°C	> 510
Coefficient of Thermal Expansion	ppm/°C	27
Dielectric Constant		3.3
Moisture Absorption@50% RH	%	1.3



Via mask in 40µm softbake film



100µm via in 40µm softbake film

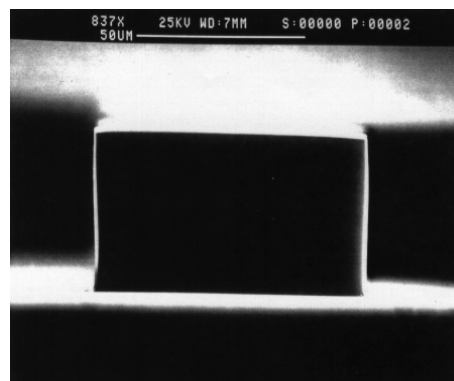


Broadband exposure, Contact print
250mJ/cm²

Durimide 7020 Thick Film Process

Spin: 1000rpm/7" + 1900rpm/10"
Soft Bake: 70°C / 6 mins +
 100°C / 6 mins
PI Thickness: 40µm
Exposure Tool: Broadband or g-line
Exp. Range 200-300mJ/cm²
Focus Range 12 microns into film
Post Exposure delay: 20-22°C/ 30 mins
Developer/Rinse: HTRD2/RER600
 85"/10"/15"
Cure: 350°C/ 60 mins
Cured Thickness: 22 µm


7005 Characteristic Curve

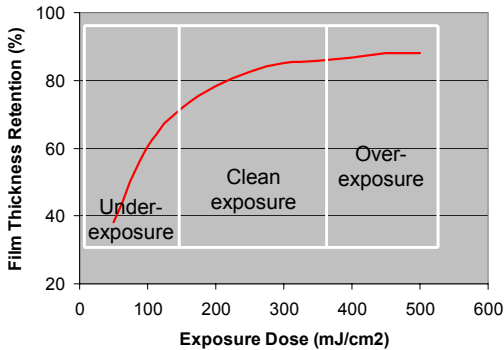


Process Summary:

Substrate: silicon
Soft Bake: 110°C / 2 mins
PI Thickness: 5µm
Exposure Tool: GCA g-line stepper
 .38NA
Post Exposure delay: 20-22°C/ 30 mins
Developer/Rinse: QZ3501/QZ3512
 30"/10"/15"

Durimide 7020 Film Thickness vs. Spin Speed

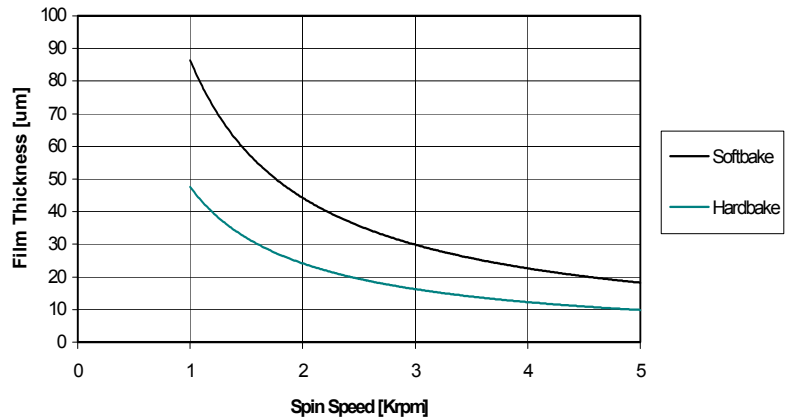

Durimide 7005 Film Thickness vs. Spin Speed

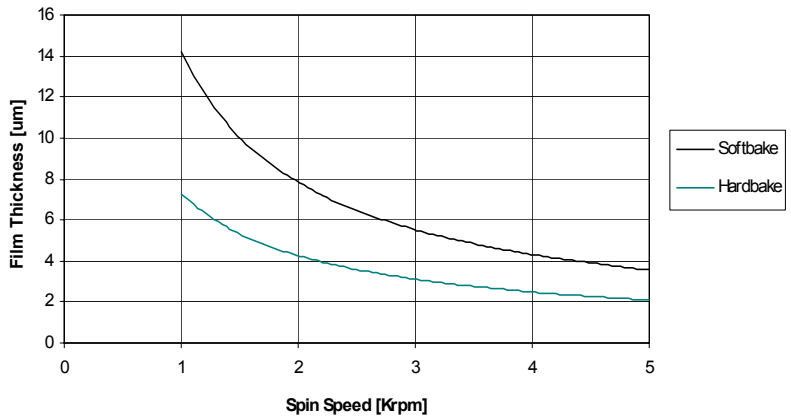

Durimide® 7000 undergoes a 45% shrinkage from softbake to cure.

The data contained in this technical bulletin is believed to be true and accurate, but is offered solely for your consideration, investigation, and verification. Nothing herein shall be construed to be a warranty or guarantee by the Fujifilm Electronic Materials manufacturer ("FFEM") or any of its affiliates, and all such warranties, implied or otherwise, including any express or implied warranty of merchantability or fitness for a particular purpose, are hereby expressly disclaimed. You are fully responsible for any use and/or domestic or foreign sales of the product(s) described. Nothing in this technical bulletin shall be construed to constitute permission or a recommendation to use or practice any invention covered by a patent or patent application or know-how owned by FFEM, its affiliates, or others. Please refer to the material safety data sheet (MSDS) for complete information on storage and handling, toxicological properties, personal protective equipment, first aid, spill and leak procedures, and waste disposal. To order an MSDS, call your FFEM sales office. Before using or handling this product, review the MSDS information thoroughly.

FUJIFILM
www.fujifilm-ffem.com

European Headquarters Fujifilm Electronic Materials (Europe) N.V.

Keetberglaan 1A
 Havennummer 1061
 B-2070 Zwijndrecht
 Belgium
 Telephone : 32-3-250-0511
 Fax : 32-3-252-4631

Fujifilm Electronic Materials U.S.A., Inc.

6550 South Mountain Road
 Mesa, Arizona 85212
 U.S.A.
 Telephone : 1-480-987-7536
 Fax : 1-480-987-7104

Worldwide Headquarters Fujifilm Electronic Materials, Co., Ltd.

15th Arai-BLDG, 6-19-20
 Jingumae Shibuya-Ku
 Tokyo 150-0001
 Japan
 Telephone : 81-3-3406-6911

Fujifilm Electronic Materials U.S.A., Inc.

Quonset Point
 80 Circuit Drive
 North Kingstown, Rhode Island 02852
 U.S.A.
 Telephone : 1-800-553-6546